

## ACCESSORY SETUP INSTRUCTIONS

**LEVER PROTECTOR, LH OR RH PN: 6AQV-802110-1000, 6AQV-803110-1000**

VALID FOR: CF 450SR/SS

EXAMPLE SHOWN IS THE LH LEVER PROTECTOR.


**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


### MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.


### PART LIST:

S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	LEVER PROTECTOR, LH_TITANIUM	6AQV-802110-1000	1	Picture is for structure reference only.
2	LEVER PROTECTOR, RH_TITANIUM	6AQV-803110-1000	1	

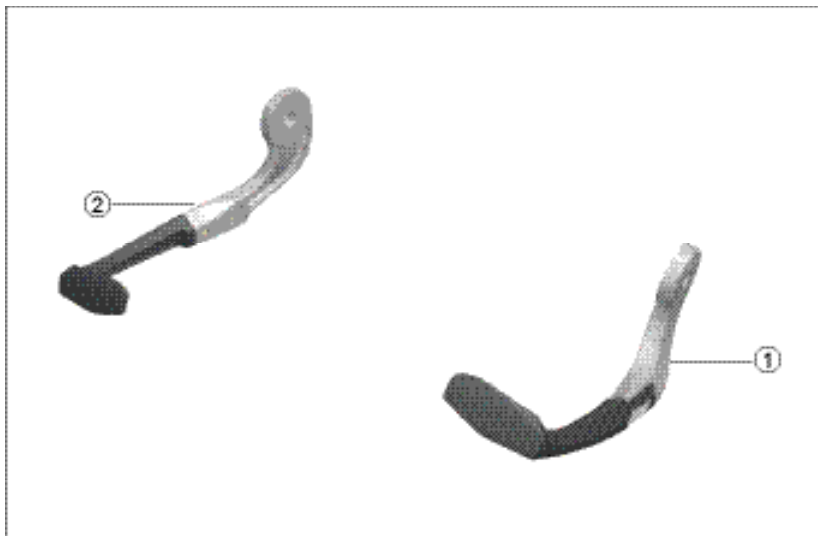

### TOOL LIST:


ITEM	DESCRIPTION	REMARK
1	M5 INNER HEX WRENCH	Recommended Tools
2	PROTECTIVE GLOVES	

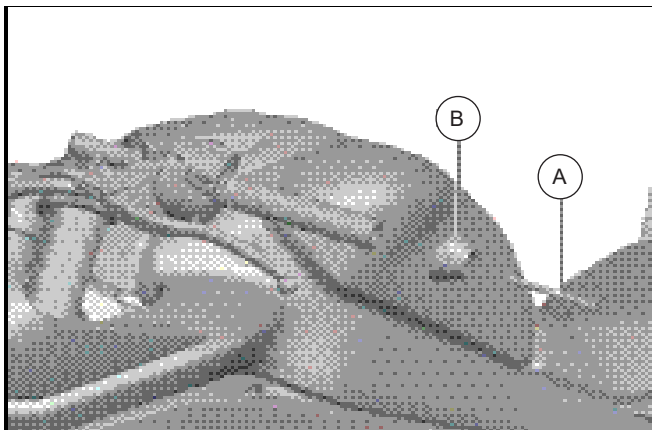**WORK**

// Remove the LH balancer (B) from the handlebar by loosening the inner hex screw (A) while pulling the balancer outward.

---

**i** - Removal of RH balancer is similar.

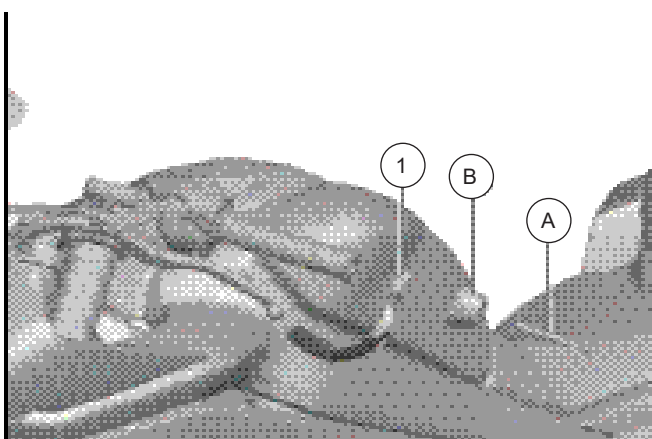

// Install the LH lever protector (1), balancer (B) and inner hex screw (A) as shown. Tighten the inner hex screw.  
// Turn the handlebar to its left and right limits to check for interference with a rearview mirror. If there is interference, rotate the lever protector downward.  
// Assembly is complete.

---

**i** - Assembly of RH lever protector is similar.