

ACCESSORY SETUP INSTRUCTIONS

BRAKE LEVER_TITANIUM, BRAKE LEVER_BLACK PN: 6AQV-802000-1000, 6AQV-802000-1000-10

VALID FOR: CF 450SR/SS

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.

PART LIST:


S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	BRAKE LEVER_TITANIUM	6AQV-802000-1000	1	Picture is for structure reference only.
	BRAKE LEVER_BLACK	6AQV-802000-1000-10	1	

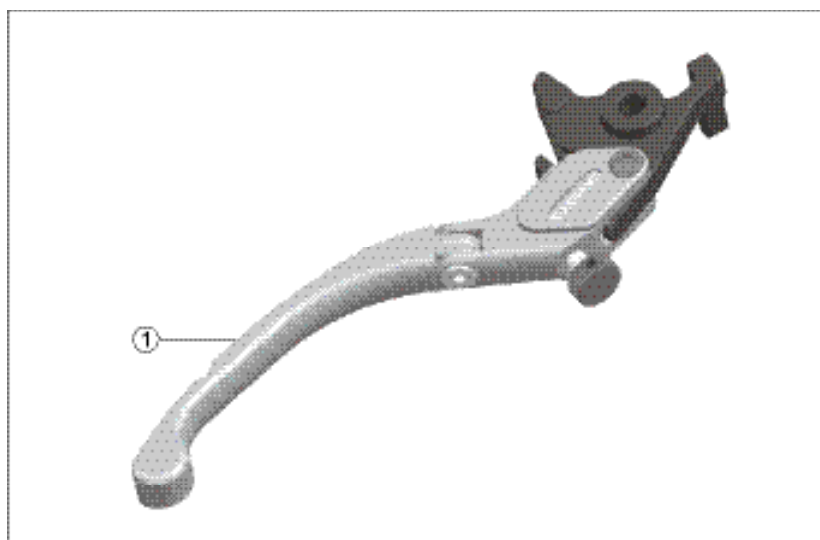


TOOL LIST:

ITEM	DESCRIPTION	REMARK
1	8mm SOCKET	Recommended Tools
2	10mm OPEN END WRENCH	
3	PROTECTIVE GLOVES	

WORK

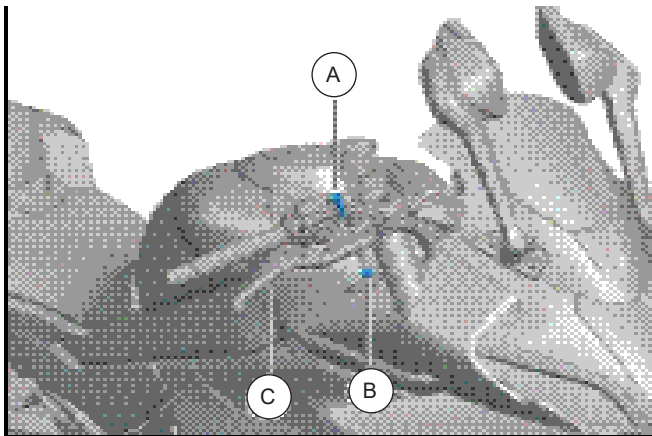

// Disassemble the bolt (A) and nut (B) to remove the original brake lever (C).

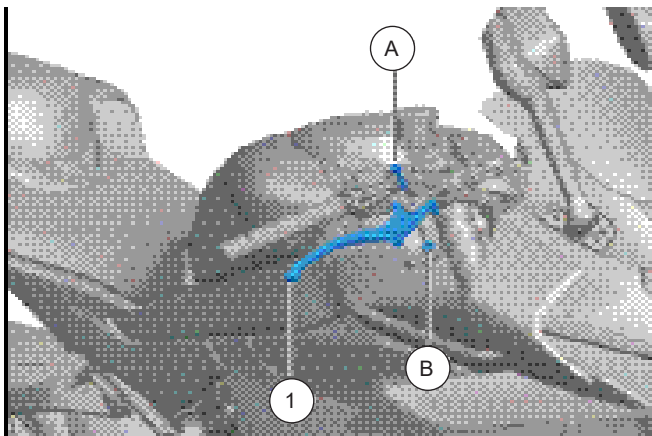

// Align the new brake lever (1) with its installation hole.
Then secure it with the original bolt (A) and nut (B).
// Assembly is complete.