

ACCESSORY SETUP INSTRUCTION

LEVER PROTECTORS -- PN 6KM6-802100-8000

VALID FOR: MY22 and later 300SS


BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	LH LEVER PROTECTOR	6KMV-802110-8000	1	
2	RH LEVER PROTECTOR	6KMV-802120-8000	1	
3	INNER HEX SCREW	30102-060050800	2	

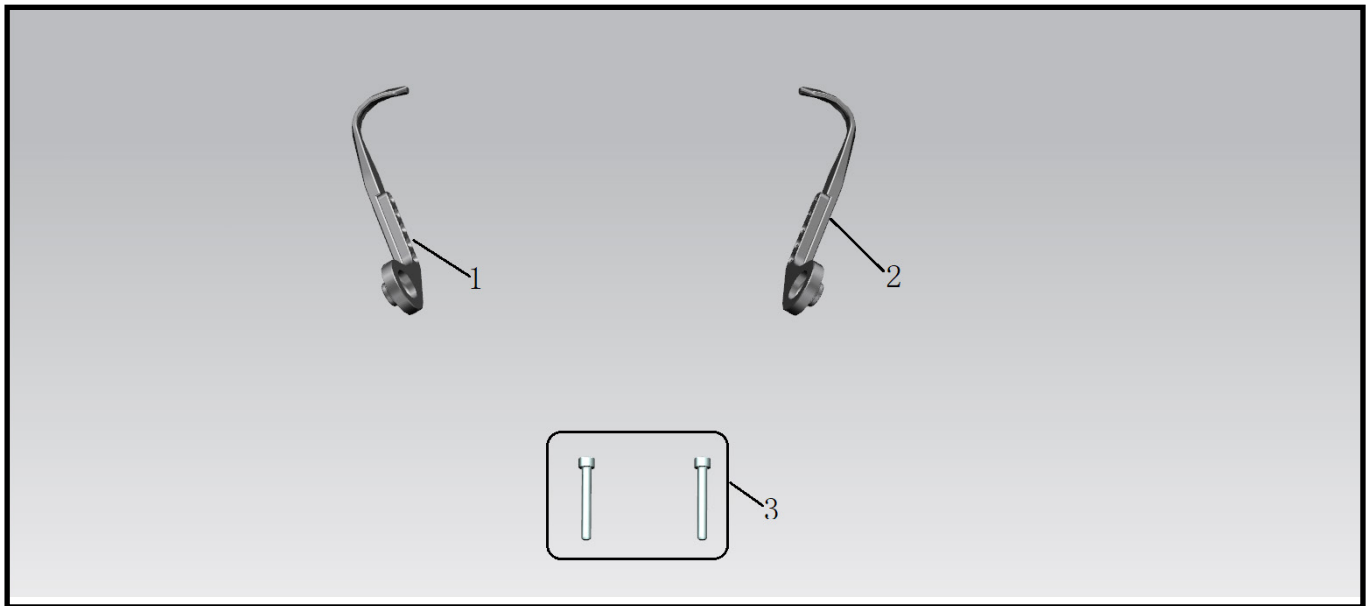


TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended tools
2	4mm ALLEN WRENCH	1	

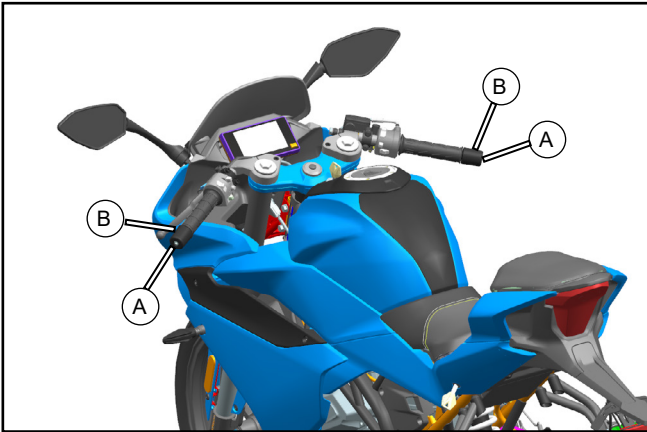

// Remove the screws (A) and the balance blocks (B) in turn.

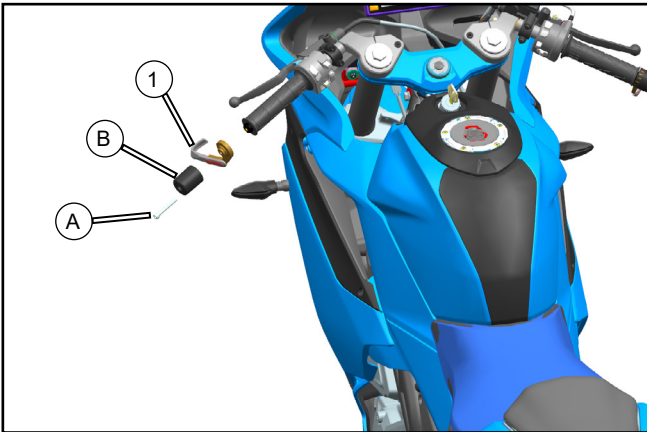

// Position the left lever protector (1) on the left end of the lever, then install the balance block (B) and tighten it with the screw (A).

i Left side shown. The right lever protector (2) is assembled in the same way.

