

ACCESSORY SETUP INSTRUCTIONS

STEERING STABILIZER KIT PN: 6KWV-800100-1000

VALID FOR: MY2024 and later 800NK

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


MEANING OF SYMBOLS

i - Indicates information with more details or tips.

! - Indicates information of warning or danger.


PART LIST:

S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	STEERING STABILIZER KIT	6KWV-800100-1000	1	Picture is for structure reference only.
2	STEERING STABILIZER	16181R54E	1	
3	BOLT M8x26	6WWW-050009-5000	1	
4	BOLT M8x20	30102-080020870	2	

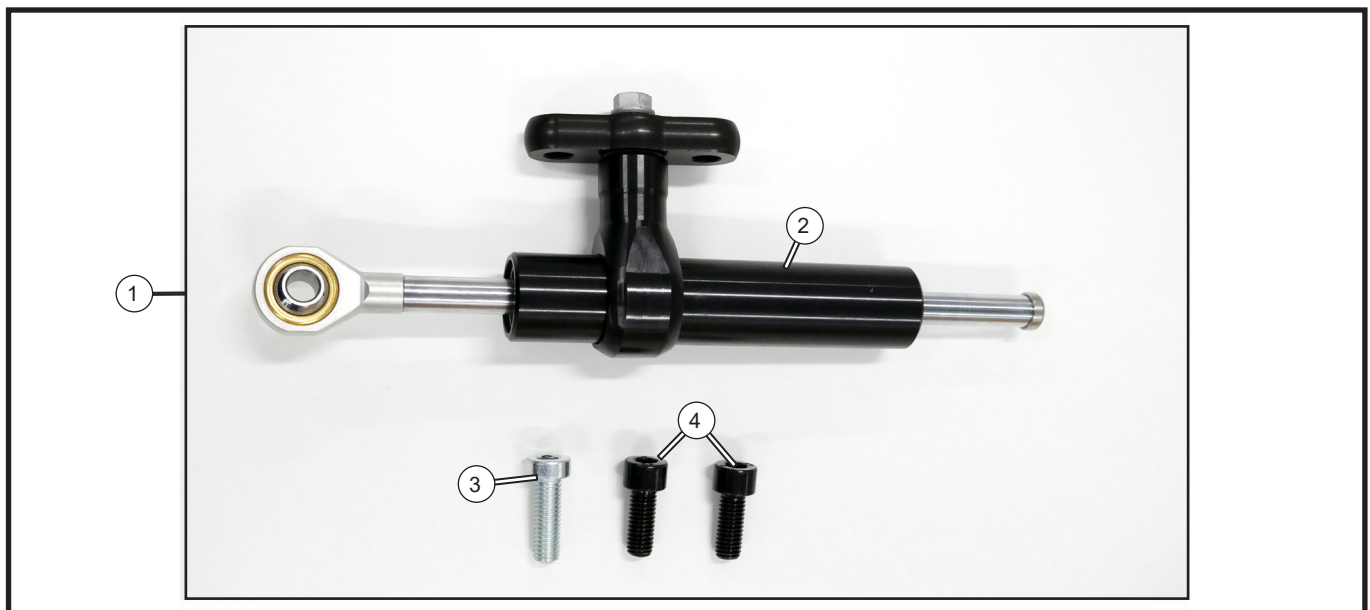


TOOL LIST:

ITEM	DESCRIPTION	REMARK
1	6mm ALLEN WRENCH	Recommended Tools
2	TORQUE WRENCH & 6mm HEX BIT SOCKET	
3	PROTECTIVE GLOVES	

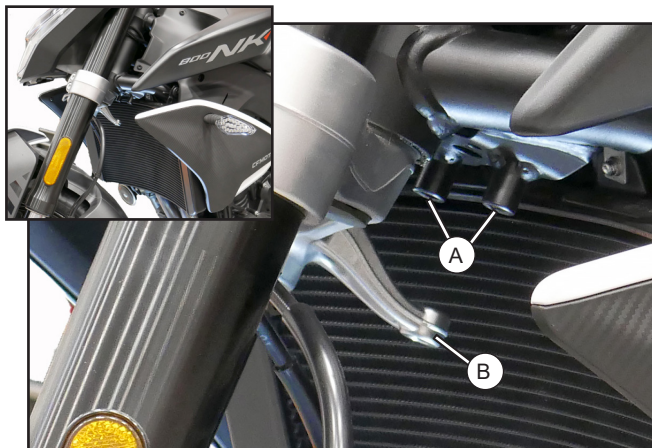WORK


// Locate the mounts (A) on the frame and the mount (B) on the lower triple clamp for the steering stabilizer.

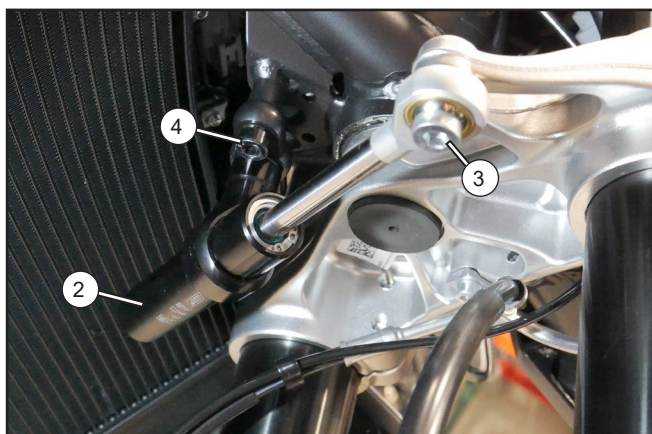

// Attach the steering stabilizer (2) to the frame using the supplied M8x20 bolts (4).
 // Attach the steering stabilizer rod to the lower triple clamp using the supplied M8x26 bolt (3).
 // Torque bolts to specification.

i » Apply medium-strength threadlocker on the bolts.

BOLT (3)	M8x26	6WWV-050009-5000	25 N•m
BOLT (4)	M8x20	30102-080020870	25 N•m



// Assembly is complete.