

## ACCESSORY SETUP INSTRUCTION

### Heated Seat, Tall -- PN 6WWV-807200-5000

VALID FOR: MY2023 and later Ibex 800 S, Ibex 800 T


**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.


**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


### MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.

### PARTS LIST:


| ITEM | PART NAME         | PART NUMBER      | QTY. | REMARK |
|------|-------------------|------------------|------|--------|
| 1    | HEATED SEAT, TALL | 6WWV-807200-5000 | 1    |        |

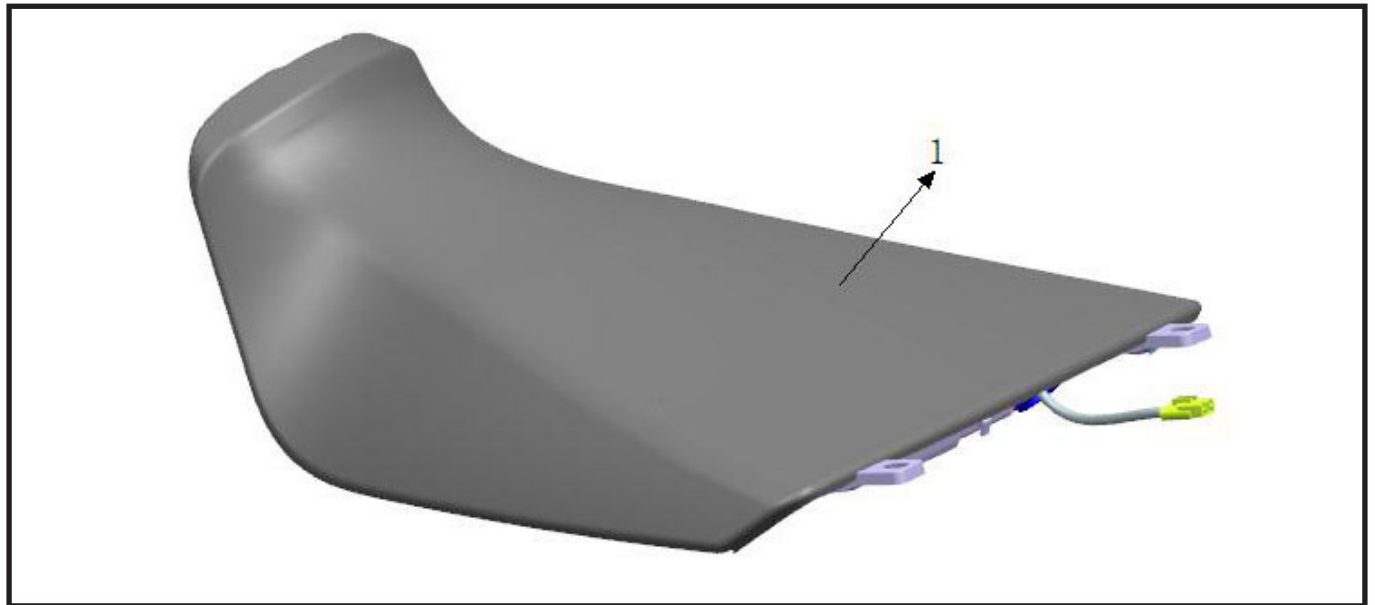


### TOOL LIST:

| ITEM | DESCRIPTION       | QTY. | REMARK            |
|------|-------------------|------|-------------------|
| 1    | PROTECTIVE GLOVES | 1    | Recommended tools |
| 2    | 10MM T-WRENCH     | 1    |                   |


## ASSEMBLY and INSTALLATION

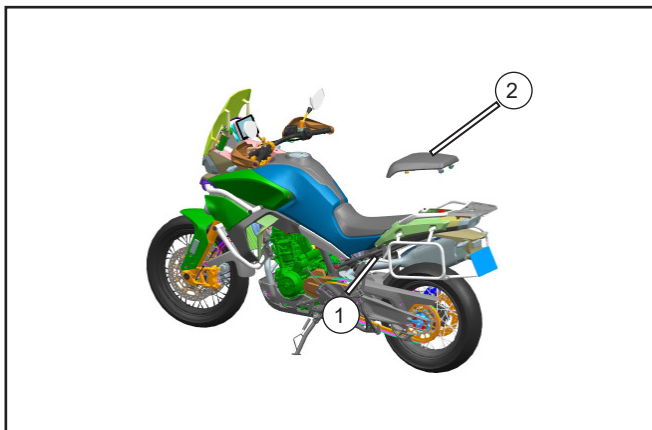


// Insert the key (1) into the seat lock and open it, and take down the rear cushion (2).

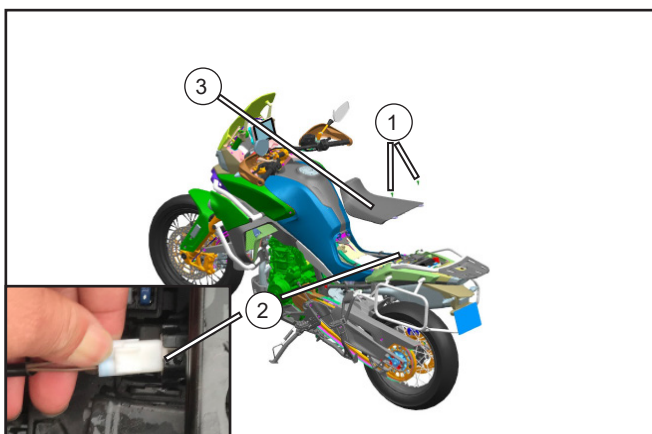

// Remove the original seat cushion mounting bolt (1), then pull out the original seat cushion connector (2), and finally remove the original seat cushion (3).

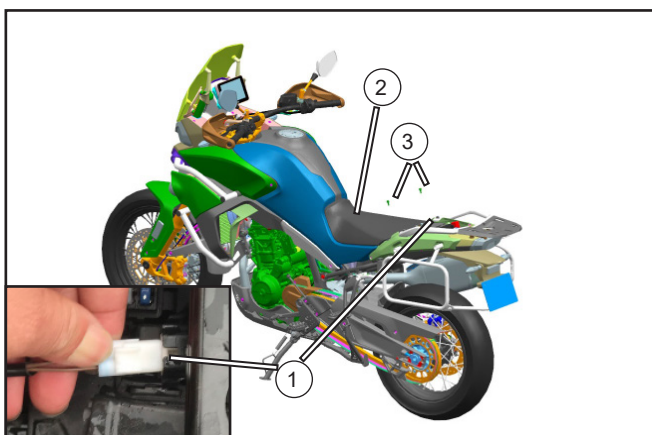

// Insert the heating cushion connector (1) into the original vehicle connector, then install the heating cushion (2) onto the vehicle, and finally place the bolt (3) in the installation position and tighten it.

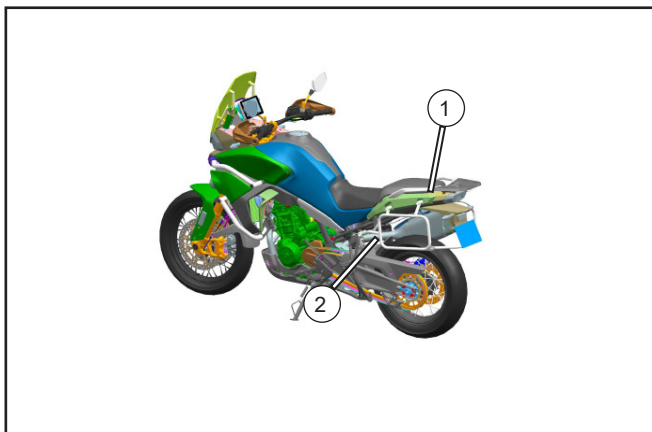

// Place the original rear cushion (1) in the assembly position, press and lock it tightly by hand, then remove the key (2) and complete the assembly.